


Condensate Pump Installation

Ultra·Aire 90H



This condensate pump kit must be installed with leveling feet. Do not use casters.

Step 1. Lay the unit on it's side. Make sure the filter door is facing upward. Note the locations of the four leveling feet and the hose adaptor.

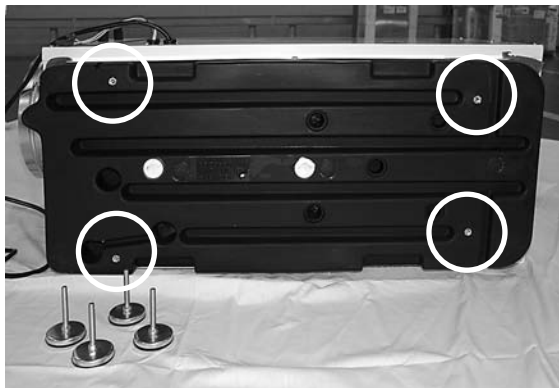

Step 2. Partially screw in the leveling feet at the four locations.



Step 3. Hand tighten the hose adaptor to get the threads started. Turn clockwise.



Step 4. Use an adjustable wrench to finish tightening. Fully seat the drain adaptor so that no leaks occur.



Therma-Stor[®] LLC


Driven by performance. Powered by design.™

P.O. Box 8680 Madison, WI 53708 • TOLL-FREE 1-800-533-7533 • www.thermastor.com • sales@thermastor.com

Step 5. Turn the unit upright onto the leveling feet and remove the screw shown. Keep this screw. You will use it in Step 7.



Step 7. Position the oblong slot in the bracket with the middle screw hole. Secure the pump to the dehumidifier with the screw removed in Step 5.

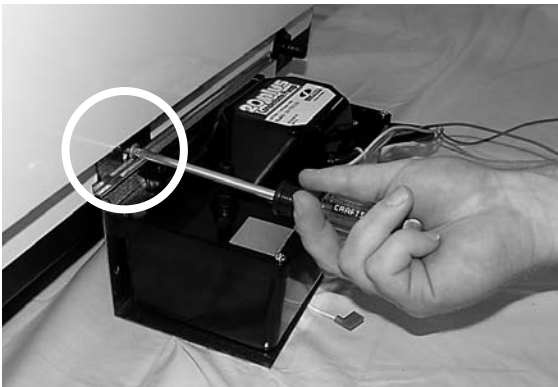


Step 8. Remove the hose/elbow assembly from the bag and install the long end into the condensate pump and the short end onto the adaptor. Make sure that the hose fully covers the adaptor barbs.



Step 9. Screw the bracket assembly to the condensate pump with two screws shown.



Step 10. Attach the 20' drain hose to the condensate pump and route it to a floor drain.

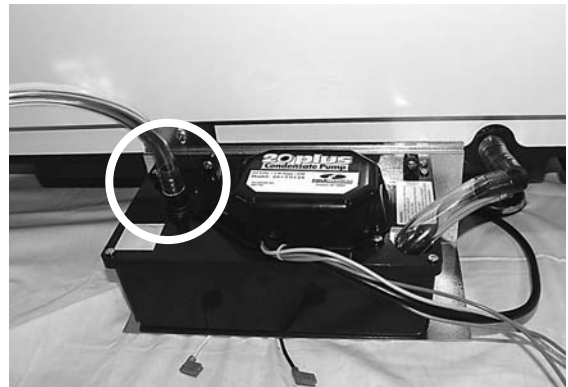

Step 11. Adjust the height of the leveling feet to move the level bubble into the clear area of the window.



Step 12. Plug in the condensate pump and the assembly is completed.



Therma-Stor[®] LLC

Driven by performance. Powered by design.[™]

P.O. Box 8680 Madison, WI 53708 • TOLL-FREE 1-800-533-7533 • www.thermastor.com • sales@thermastor.com